

Sisto_{wood}


Sisto is a carefully designed table combining style with stability. This table is very convenient for wheelchair users, thanks to the absence of side rails under the tabletop.

Support

- The square legs are made of solid beech 45 x 45 mm.
- Each leg is fixed to the tabletop by means of a metal support with a central hidden fastening.
- The underside of the tabletop has no side rails, so that a free height of 73 cm is always guaranteed.
- Wheelchair-accessible.
- The wooden parts are finished with a coat of varnish.
- The legs are equipped with synthetic glides.

Tabletop

- The top is made of a stratified chipboard (thickness: 20 mm).
- The top and bottom of the tabletop are finished with a HPL layer.
- The table edges are finished in accordance with the choice of the tabletop.

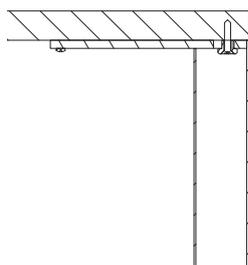

Central hidden fastening.


Colours

We would like to refer to our extensive colour gamut. Sample card + samples available on request.




Dimensions

11991 | Sisto wood table

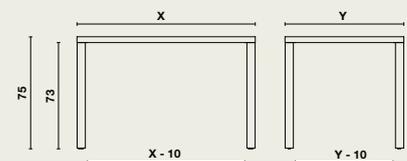

12433 | Sisto wood coffee table



X (cm)	Y (cm)
70	50
70	90
80	60
80	80
90	90
120	80
140	80
160	80

Materials and finishing

- Wood: chipboard, solid beech.

For further information about used **materials**, **constructions** and **maintenance**: consult our materialfiles.

Options

- Tabletop made of solid lightweight chipboard without false edge on the bottom, thickness 38 mm.
- Specific dimensions possible on request.

