

Advance Hospital

10964 The Advance is a very elegant, affordable and durable bedside table. You can choose between a double-sided or one-sided version and can be equipped with an optional refrigerator and/or dinner tray.

One-sided version (storage cabinet, open compartment, drawer)

- 2 side panels, a bottom, a middle panel and a tabletop.
- The back is made of steel plate.
- The side panels are covered with 2 MDF posts with an aluminium look and a light grey melaminated chipboard of 19 mm thick.
- Solid laminate door.
- Equipped with high-quality self-closing hinges, opening up to 175°.
- The door hinges can be installed on the right or left side.
- Metal design handle.
- An open compartment is accessible from on the front side.
- The drawer is made of steel plate and has a solid laminate front.
- The drawer glides on 2 synthetic rails with an end stop.
- The drawer is equipped with a removable synthetic drawer tray.
- The metal parts are protected by a light grey epoxy-coating.
- The tabletop has rounded solid laminate corners.
- 4 design castors Ø 65 mm.


Optional dinner tray Livia

- Folding.
- Easy to incline in both directions.
- The dinner tray has an upright edge.
- The folding part is fixed on a strong aluminium guiding profile that has been finished with an anodisation layer.
- The dinner tray is height-adjustable (between 80 and 110 cm) by means of a gas spring.
- Dimensions of the dinner tray: 63 x 40,5 cm.
- The gas spring is activated by means of a foot pedal.
- The dinner tray is made of fire-retardant ABS.
- The bedside table stands on 5 design castors Ø 65 mm.



Dimension

10964 | one-sided version | 51 x 47 x height 88 cm
with dinner tray Livia | 67 x 47 x height 88 cm

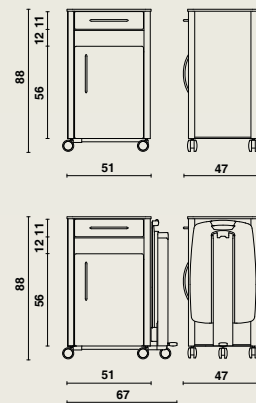

Materials and finishing

- Solid laminate
- Wood: MDF and melaminated chipboard (light grey).
- Metal: epoxy-coating (light grey).
- High-quality self-closing hinges.
- Withstands the common cleaning products.

For more information about the **materials, construction and maintenance**: please consult our material lists.

Options

- Livia dinner tray.
- Refrigerator.
- Cylinder lock.
- Bottle holder.
- Gallery.
- Cases for a telephone holder.
- Telephone holder.
- Removable tray with upright edges for the tabletop.
- 4 bumper castors.
- 4 castors with brakes.

Colours

We would like to refer to our extensive colour gamut.
Sample card + samples available on request.

