

Atlas Care

09593 The Atlas Care bedside table with high drawer, is very compact and matches perfectly with the Atlas wardrobe gamut.

Version with high drawer (storage drawer, open compartment, drawer)

- 2 side panels with a front lath, back, bottom, and a tabletop.
- Made of melaminated chipboard (thickness 18 mm).
- The panels are connected to each other by means of wooden dowels and eccentric cams.
- Metal design handle.
- The drawer is installed in the cupboard frame by means of high-quality steel rails with an end stop.
- The metal parts are protected by an epoxy-coating.
- The tabletop has rounded corners and edges and is made of melaminated chipboard of 18 mm.
- 4 hidden castors Ø 50 mm.

Optional dinner tray Livia

- Folding.
- Easy to incline in both directions.
- The dinner tray has an upright edge.
- The folding part is fixed on a strong aluminium guiding profile that has been finished with an anodisation layer.
- The dinner tray is height-adjustable (between 80 and 110 cm) by means of a gas spring.
- Dimensions of the dinner tray: 63 x 40,5 cm.
- The gas spring is activated by means of a foot pedal.
- The dinner tray is made of fire-retardant ABS.
- The bedside table stands on 5 design castors Ø 65 mm.
- The dinner tray can be optionally provided with a Click 'n' turn mechanism which allows to move the dinner tray from one side to the other side of the bedside table.

Colours

We would like to refer to our extensive colour gamut. Sample card + samples available on request.


Handles

- Open handle
- Closed handle



Dimension

09593 | 49,5 x 49,5 x height 83 cm
with dinner tray Livia | 65 x 49,5 x height 88 cm

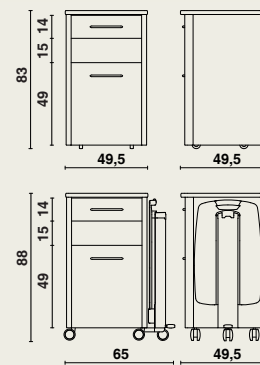

Materials and finishing

- Wood: chipboard (melaminated).
- Metal: epoxy-coating (clear gray).
- Withstands the common cleaning products.

For more information about the **materials, construction and maintenance**: please consult our material lists.

Options

- Finishing in veneer.
- Livia dinner tray.
- Gallery.
- Cylinder lock.
- Cases for accessories on the tabletop.
- Telephone holder.
- 2nd drawer in the open compartment.
- Extensible tray.
- Bottle holder (3 bottles) for high drawer.
- 4 design castors Ø 65 mm.
- 4 design castors Ø 65 mm with brake.
- USB charger and 2 sockets built into the back.

