

arn



KUSCH+CO
by Nowy Styl



Clean lines, rounded edges, following the form of the legs – a table as design object. Its design language closely matches that of the namesake seating series. This series comes with flat screwed-on plates to connect the either wooden or aluminium legs to the table top for a lightweight appearance.



Content

Variations	4
Product data	6
Materials, finishes	9
Solutions	13
Quality, sustainability	14
References	15



Design by Scaffidi & Johansen

Antonio Scaffidi and Mads K. Johansen both graduated from the Danish Design School in Copenhagen. Whereas Antonio Scaffidi benefits from the symbiosis between his fiery Italian temperament and Nordic culture, Mads K. Johansen was driven by his artistic passion as cabinet maker. Their creative process is centered around flawless efficiency and design as comprehensible visualization. Mads K. Johansen's life journey ended in autumn 2014.

Variations

3600 Tables, with wooden legs and screwed-on plates

Tables characterized by a straightforward, sleek design language through the use of extremely flat screwed-on plates as stable connection between the wooden legs and the table top. The either round or rectangular table tops are available in many sizes and finishes.



3600/6



3610/6

3650 Tables, with aluminium legs and screwed-on plates

The solid wooden legs have been substituted for slightly elliptic aluminium profiles, without changing the overall design language. The aluminium legs are always fixed by means of screwed-on plates.



3650/6



3660/6

3651 Tables, with aluminium legs and screwed-on plates, for outdoor use ☀️

The table variations with die-cast aluminium legs and the solid core hpl theben table tops are also suited for outdoor use.



3651/6



3661/6

All square and rectangular tables 3600/3650 Arn can be stacked in a staggered formation.



Product data

3600 Arn

3600/6

Square/rectangular table with screwed-on plates

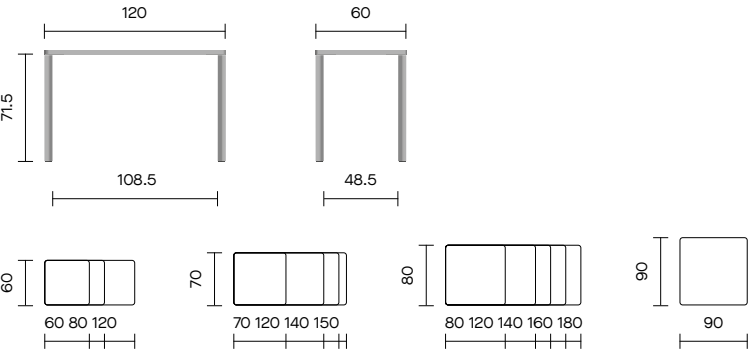


Table tops longer than 150 cm with an extra reinforcing bar

3610/6

Round table with screwed-on plates

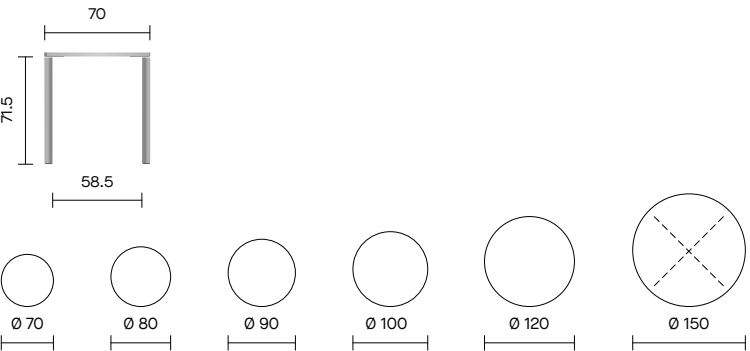


Table tops larger than 150 cm with an extra reinforcing bar

Tops

D **E**

Lippings

1 **4** **6** **7** **10** **11** **30** **33**

Accessories

- Plastic glides
- Felt glides
- Reduced frame height/vertical clearance (indication of height including glides)
- Custom height with reduced frame height on request
- Custom height with raised frame height + 3 cm, + 7 cm and + 10 cm
- Linking elements table/table (not for round tables)
- Power and data modules (for tables 3600/6)

3650 Arn

3650/6

Square/rectangular table with screwed-on plates

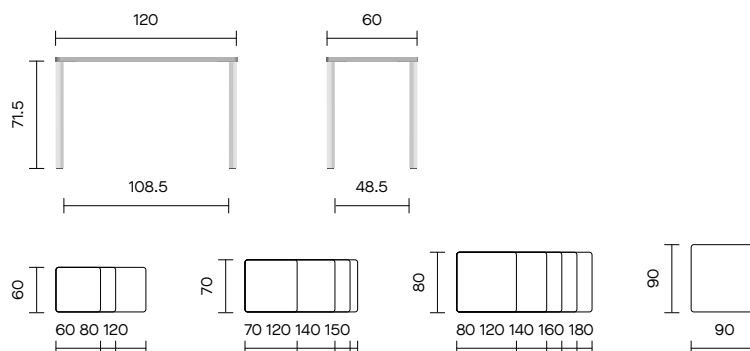


Table tops longer than 150 cm with an extra reinforcing bar

3660/6

Round table with screwed-on plates

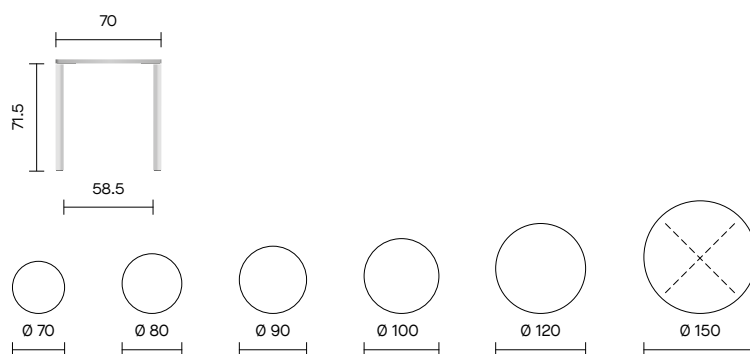


Table tops larger than 150 cm with an extra reinforcing bar

Tops

D **E**

Lippings

1 **4** **6** **7** **10** **11** **30** **33**

Accessories

- Height adjustable plastic glides up to +2 cm
- Height adjustable felt glides up to +2 cm
- 2 castors (frame height/vertical clearance under table remain unchanged)
- Reduced frame height/vertical clearance (indication of height including glides)
- Custom height with reduced frame height on request
- Custom height with raised frame height +3 cm, +7 cm and +10 cm
- Linking elements table/table (not for round tables)
- Power and data modules (for tables 3650/6)




Product data

3651 Arn


3651/6

Square/rectangular table with screwed-on plates, for outdoor use

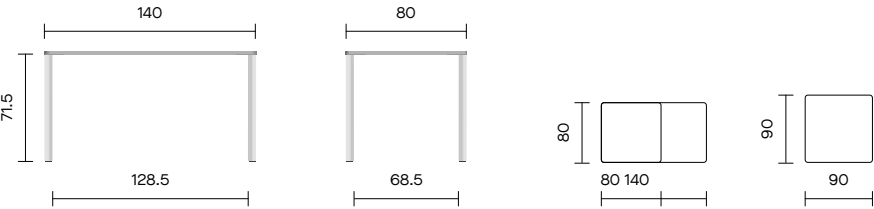

3661/6

Round table with screwed-on plates, for outdoor use

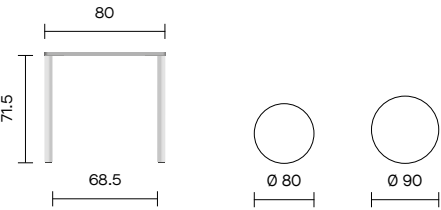

Tops



Accessories

- Height adjustable plastic glides up to + 2 cm
- Height adjustable felt glides up to + 2 cm
- Reduced frame height/vertical clearance (indication of height including glides)
- Custom height with reduced frame height on request
- Custom height with raised frame height + 3 cm, + 7 cm and + 10 cm
- Linking elements table/table (not for round tables)



Materials, finishes

3600/3650 Arn

Table tops

- Table top corners rounded, corner radius of the table tops 36 mm

Screwed-on plates

- Steel, silver 98 powder coated (tables 3050 Arn)
- Steel, RAL 9006 white aluminium powder coated (tables 3650 Arn)

Wooden legs

- Natural beech or stained acc. to standard collection
- Natural oak or stained acc. to standard collection

Aluminium legs

- Mat anodised silver
- Optionally bright anodised silver
- Powder coating on request

Powder coating




RAL 9006
white aluminium
(metallic effect)
for screwed-on
plates and
reinforcing bar



silver 98
(metallic effect)
for screwed-on
plates



Beech stains K



natural beech



global beech
K 05



maple
K 01



cream
K 04



oak
K 40



tobacco
K 02



sienna
K 10 (P 10)




puce
K 11 (P 11)

Beech stains S



arctic
S 42



white
S 40



saalem
S 54



pimento
S 57



tinkerbell
S 55



scampolo
S 56



midnight blue
S 38



light grey
S 39



black*
S 10

* Not available for beech and maple veneer.

Oak stains K



natural oak



cognac oak
K 45 (P 45)



solid oak
K 43 (P 43)



lounge oak
K 44 (P 44)



noce oak
K 46 (P 46)



light oak
K 50



dark oak
K 51

Closed porous veneer tops



BU Beech



AH Maple

Open porous veneer tops



NB Walnut



ES Ash



EI Oak

Materials, finishes

Available decor sizes laminate HPL Resopal Antibacterial
HPL = High Pressure Laminate



300 x 150 cm
High pressure laminated tops HPL Resopal frosty white, alabaster, shadow nut, north sea and theben.

300 x 130 cm
High pressure laminated tops HPL Resopal pearl white, maple, global beech, sol oak, silver grey, soft grey and ebony.

210 x 130 cm
Low flammability high pressure laminated tops HPL Resopal global beech and silver grey. Other colours are available on request for larger orders.



Laminate HPL Resopal® Antibacterial

RESOPAL

frosty white 1573-60	pearl white 0105-60	alabaster D 431-60	maple 4230-60	global beech 4306-60 ¹	sol oak 4176-60
shadow nut 4079-60	silver grey 0160-60 ¹	soft grey 1500N-60	north sea D90-60	ebony 10622-60	theben 2487-60

Laminate Fenix NTM®

FENIX NTM

Available decor sizes laminate Fenix NTM

300 x 150 cm
Laminated tops Fenix NTM



bianco kos 0032	verde comodoro 0750	blu fes 0754	rosso jaipur 0751	cacao orinoco 0749
grigio antrim 0752	grigio bromo 0724	nero ingo 0720		





¹ Also available in low flammability finish.
² Antibacterial coating
³ Optionally standard stain (HPL top)


⁴ Also suited for outdoor use


Types of lipping


14



ABS snow white

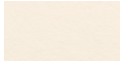

ABS white²



ABS maple²

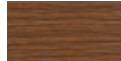

ABS beech²



ABS oak



ABS shadow nut


ABS silver grey²



ABS soft grey


ABS north sea



ABS ebony



ABS black


671011



massive beech³


3033



PP bianco kos



PP verde comodo



PP blu fes


PP rosso jaipur


PP cacao orinoco



PP grigio antrim


PP grigio bromo


PP nero ingo

Protective edge for lippings

4101133


jet black

Materials, finishes

Table tops



D 18.0 kg/m²
FSP-HPL¹ / 27 mm
Core: 3-layered chipboard with a laminate finish (HPL or Fenix NTM).



E 17.5 kg/m²
FSP-FU¹ / 27 mm
Core: 3-layered chipboard with a high-grade wooden veneer finish.



X 22.4 kg/m²
VK-HPL² / 16 mm
Full core material black, HPL Resopal finish theben, low flammability.

Lippings



1
KK2 / 2 mm
2 mm plastic ABS.



6
HK2 / 2 mm
2 mm wood.



7
UK2 / 2 mm
2 mm wood, HPL Resopal top covers lipping.



4
KS2 / 2 mm
2 mm plastic ABS with protective edge.



10
HS2 / 2 mm
2 mm wood with protective edge.



11
US2 / 2 mm
2 mm wood with protective edge, HPL Resopal top covers lipping.














30
KK1 / 1 mm
1 mm plastic PP.



33
KS1 / 1 mm
1 mm plastic PP with protective edge.

Which table top, which lipping?

This chart gives an overview of all combinations which are technically possible.

								
	1	6	7	4	10	11	30	33
 D ¹	•	•	•	•	•	•	•	•
 E ¹		•			•			
 X ²								

Outdoor use

Only products with this logo are suited for temporary outdoor use up to a certain degree. The mechanical properties of the plastic components are not impaired by the weather conditions. However, discolouration and

irreversible soiling of the plastic components is inevitable, and therefore no grounds for complaint. The outdoor use of these products in extreme weather conditions (i.e. tropics, persisting frost, exposure to extreme UV

radiation or constant temperatures > 40 °C) is not possible, and should be limited dependent on the seasons.



¹ Also available in low flammability finish.



² Also suited for outdoor use

Solutions

Excerpt

Depending on the environment, contract seating has to be able to fulfil very specific requirements. Interior designers and planners sometimes have to clear difficult hurdles: such as exacting fire prevention regulations or seating suited for people with reduced mobility. Kusch+Co has worked out individual solutions:

Fire Prevention

Wooden parts

As standard, wooden parts as well as high-grade wooden veneer finishes and high-grade wooden veneer lippings are protected by a UV curing, environmentally harmless, water-based lacquer meeting all the requirements of "low flammability" acc. to DIN EN 13501 B s2 d0.

Table tops

Table tops with a 3-layered chipboard core, and featuring either a HPL or real wood veneer surface are also available in a low flammability finish.

Please contact us if you wish to receive the test reports.

Reduced Mobility

Many people experience mobility difficulties, among them are senior citizens, pregnant women, persons of short stature, as well as persons with an individual disability. Sitting can be quite a hurdle, as they may have difficulties in taking a seat or getting up from normal seating. In this case, the standard seat height of 42 or 45 cm is usually too low.

Next to the standard frame height, all table variations of the table series 3600/3650 Arn are also available with a higher frame: + 3 cm, + 7 cm and + 10 cm. As such, these tables are a perfect match for seating with a raised seat height.

Please contact us to receive further information.



Quality

Our environmental and quality management systems are certified acc. to DIN EN ISO 14001:2015 and to DIN EN ISO 9001:2015. External audits as well as our in-house laboratory safeguard our quality level.

The tables of series 3600/3650 Arn meet the requirements with regard to stability, static and dynamic load as well as strength and durability in compliance with the current European Directives, standards and regulations.

On top of this, we voluntarily test the strength of our table frames with an additional horizontal load test using higher weights and more test cycles.

All the power and data modules feature safety-tested components bearing the VDE mark. All tables with power and data modules meet the requirements of the European Directives, standards and regulations currently in effect.

The components are all fitted, tested, labelled, and documented by skilled and trained personnel.

We are certified in compliance with DIN EN ISO 9001:2015. In our own laboratory, we test our products before their market launch whether they comply with the normative requirements applicable to contract seating, task chairs, and tables, and issue a Declaration of Conformity.

We happily make these Declarations of Conformity as well as our brochure “Mission Statement Quality” providing detailed information on our test procedures available to you – please contact us.



Sustainability

Kusch+Co products stand for long life cycles and optimum recyclability. From the first design drafts of a new product, we take all environmental-relevant components and production processes into consideration, ranging from the materials selection and the design all the way to the manufacturing processes which also contribute towards our sustainable energy balance.

Environmental Product Declarations are available for all series, in accordance with DIN EN ISO 14021 Type II, providing more information about all environmentally relevant aspects, including the Credit Points for the LEED certification of a building. Please contact us for more information.

Environmental Product Declaration

In accordance with ISO 14021, type II

3600 Arn

Environmental aspects

Environmental responsibility

Long before the production of a new series, Kusch+Co starts thinking about the possible environmental impact of the production processes and the required components.

Sustainability

Kusch+Co understands sustainability as the realistic, manageable and economically viable combination of environmental protection, economics and CSR, not only in terms of production, but also how we communicate with our fellow men, our staff members and partners. Sustainability cannot be measured, but it can be sensed. We live and breathe sustainability across all divisions, in accordance with our environmental guidelines. When creating the technical drawings, we label all recyclable plastic parts accordingly, adding material designation, recycling code and date stamp in order to assure correct sorting and traceability. Our environmental objectives are set and pursued within the framework of the mandatory energy audits in compliance with ISO 50001. We voluntarily align our operations and strategies with the ten universally-accepted Global Compact Principles.

Quality assurance

In order to guarantee a constant high-level product quality, Kusch+Co is certified in accordance with the quality management system DIN EN ISO 9001:2015 and the environmental management system DIN EN ISO 14001:2015. We offer a 5-year warranty as standard. We adhere to and ensure the compliance with all requirements laid down in ISO 45001 Occupational Health and Safety.

Life Cycle

1 Materials

- The models of series 3600 Arn are free from hazardous materials (lead, mercury, PVC).
- All components of series 3600 Arn comply with the legal REACH standards.
- All our surfaces and materials are exempt of substances included on the SVHC candidate list and these substances do not exceed 0.1% of the entire product weight.

A separate Declaration of Conformity regarding the REACH Regulation is available on request.

Environmental Product Declaration

In accordance with ISO 14021, type II

3650 Arn

Environmental aspects

Material composition

	3650/R	3660/R
Model	26.8 kg	30.7 kg
Weight	140 x 70	Ø 80
Dimensions (in cm)	33.4 %	38.1 %
Recyclate percentage	99.3 %	98.9 %
Recyclability		

3650/R Rectangular table

140 x 70 cm, chipboard 27 mm, HPL, plastic tipping

Steel 11.9 %

Aluminum 19.3 %

Plastic 1.5 %

Miscellaneous 0.7 %

Chipboard 66.2 %

3660/R Round table

Ø 80 cm, chipboard 27 mm, HPL, plastic tipping

Steel 17.8 %

Aluminum 28.9 %

Plastic 2.2 %

Miscellaneous 1.1 %

Chipboard 48.4 %

These certificates prove the environmental and social compatibility of series 3650 Arn. At least 70% of the wood used for the production of this series is PEFC-certified. Certificate No. 4430207090.

14 | 3600 / 3650 Arn

References

Excerpt

Austria

- DoN in the Office Park,
Vienna International Airport

Belgium

- General Hospital Groeninge, Kortrijk
- Residential care and nursing home
De Gerda, Sint-Niklaas
- Residential care and nursing home
De Vlinder, Harelbeke
- Residential care and nursing home
Huize Sint-Jozef, Ypres
- Residential care and nursing home
Sint-Elisabeth, Ostend
- Residential care and nursing home
Ter Durme, Lokeren
- St. Jozef Hospital, Campus Bornem

Germany

- Association for persons with a severe
disability e. V., Copenbrügge
- Christophorus-Werk Lingen e. V.,
Residential Home Schapen
- Helios Hospital, Berlin-Buch
- Helios St. Johannes Hospital, Duisburg
- Rheumazentrum Mittelhessen
GmbH & Co. KG (Center for Rheumatic
Diseases), Bad Endbach
- Robert Bosch Hospital, Stuttgart
- Specialist Hospital Bad Bentheim
- St. Mary's Hospital, Dresden
- Volkswagen Sachsen GmbH, Die Gläserne
Manufaktur (The Transparent Factory),
Dresden
- Youth Center Stahlnetz, Krefeld



Residential care and nursing home Huize Sint-Jozef, Ypres



Residential care and nursing home De Gerda, Sint-Niklaas









Rheumazentrum Mittelhessen GmbH & Co. KG (Center for Rheumatic Diseases), Bad Endbach

