llana Hospital

10969 The stylish llana bedside table is made of very durable materials such as solid laminate and aluminium.

The bedside table is standard double-sided, and can be optionally equipped with a dinner tray.

Double-sided version with high drawer (high drawer, open compartment, double-sided drawer)

- The sides are made of 8 mm solid laminate panels that are assembled between 4 aluminium corner profiles.
- Solid laminate drawer fronts.
- Metal design handle.
- An open compartment is accessible from all sides.
- The drawers are made of steel plate and have solid laminated fronts.
- The drawers glide on 2 synthetic rails.
- The upper drawer is equipped with a removable synthetic tray.
- Aluminium and steel parts are protected by an epoxy-coating or an anodisation layer.
- Tabletop with rounded solid laminate corners.
- 4 design castors Ø 65 mm.

Optional dinner tray Livia

- Folding.
- Easy to incline in both directions.
- The dinner tray has an upright edge.
- The folding part is fixed on a strong aluminium guiding profile that has been finished with an anodisation layer.
- The dinner tray is height-adjustable (between 80 and 110 cm) by means of a gas spring.
- Dimensions of the dinner tray: 63 x 40,5 cm.
- The gas spring is activated by means of a foot pedal.
- The dinner tray is made of fire-retardant ABS.
- The bedside table stands on 5 design castors \emptyset 65 mm.
- The dinner tray can be optionnaly provided with a Click 'n' turn mechanism which allows to move the dinner tray from one side to the other side of the bedside table.

Handles

We would like to refer to our extensive colour gamut. Sample card + samples available on request.


- Open handle

- Closed handle



Dimension

10969 | 51 x 42,5 x height 86 cm with dinner tray Livia | 67 x 42,5 x height 86 cm

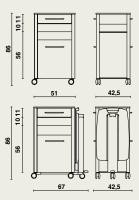

Materials and finishing

- Solid laminate.
- Metal: aluminium & steel.
- High-quality self-closing hinges.
- Withstands the common cleaning products.

For more information about the **materials**, **construction and maintenance**: please consult our material lists.

Options

- Livia dinner tray.
- Cylinder lock on the drawer.
- Cylinder lock on the door.
- Gallery.
- Cases for the telephone holder.
- Telephone holder.
- Removable tray with upright edges for the tabletop.
- Bottle tray (3 bottles).
- 4 bumper castors.
- 4 castors with brakes.
- Click 'n' turn mechanism.



Colours