

# Forma Hospital

**18379** The Forma bedside table offers you an elegant, cost-effective and durable storage unit.

The bedside table is double-sided and can be optionally equipped with a dinner tray.

## Double-sided version (storage cabinet, open compartment, double-sided drawer)

- The sides are made of steel plate.
- Solid laminate (8 mm) doors, opening up to 110°.
- The storage cabinet has a removable solid laminate shelf.
- The drawer can be opened on both sides. It is made of steel plate and has 2 solid laminated fronts.
- The drawer is equipped with a removable synthetic drawer tray.
- Metal design handles.
- An open compartment is accessible from both sides.
- The metal parts are protected by an epoxy-coating.
- The tabletop is made of solid laminate and has rounded corners.
- 4 design castors Ø 65 mm.


## Optional dinner tray Livia

- Folding.
- Easy to incline in both directions.
- The dinner tray has an upright edge.
- The folding part is fixed on a strong aluminium guiding profile that has been finished with an anodisation layer.
- The dinner tray is height-adjustable (between 80 and 110 cm) by means of a gas spring.
- Dimensions of the dinner tray: 63 x 40,5 cm.
- The gas spring is activated by means of a foot pedal.
- The bedside table stands on 5 design castors Ø 65 mm.
- The dinner tray can be optionally provided with a Click 'n' turn mechanism which allows to move the dinner tray from one side to the other side of the bedside table.



## Dimension

**18379 | double-sided | 43 x 48 x height 86 cm**  
**with dinner tray Livia | 59 x 48 x height 86 cm**

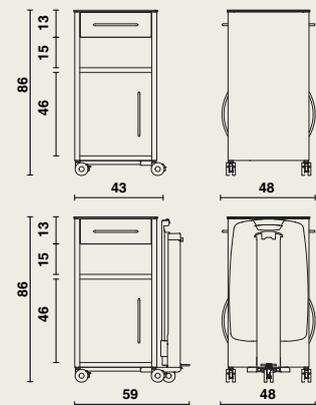

## Materials and finishing

- Solid laminate
- Metal: epoxy-coating (light grey or white).
- Withstands the common cleaning products.

For more information about the **materials, construction and maintenance**: please consult our material lists.

## Options

- Open compartment finished with solid laminate.
- Livia dinner tray.
- Cylinder lock on top drawer.
- Electronic lock on top drawer.
- Gallery.
- Cases for accessories.
- 4 castors with brakes.
- Click 'n' turn mechanism for Livia dinner tray.
- Bottle holder.

## Colours

We would like to refer to our extensive colour gamut.  
Sample card + samples available on request.

## Handles

- Open handle
- Closed handle

